


# Tassel Brightz™

## Instructions

© Copyright Brightz, Ltd. 2018  
All rights reserved

### Step 1 – Install batteries

From the BACK of the battery pack slide the back up to remove the battery cover. Install 3 fresh AA batteries, observing the correct polarity (+/-). Replace battery cover.

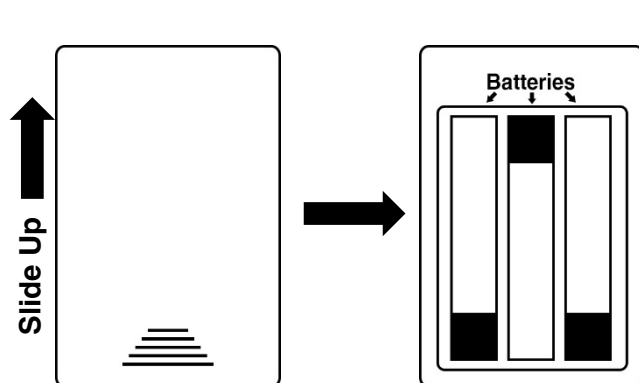

*Do not mix old and new batteries and do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.*




***Caution:** Batteries may explode or leak, and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, or inserted backwards. Replace all used batteries at the same time. Clean battery contacts and contacts on the device prior to installing. Remove batteries if item will not be used for long periods of time. When battery expires remove promptly.*

### Step 2 – Operation

To operate, from the top of the battery pack slide the LED switch to the “Off”, “On” or “Timer” position.  
- The timer lasts 6 hours and then it will automatically shut off.

Top of Battery Pack

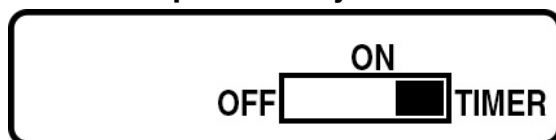

### Add Some Color to Your Life!

Use it AGAIN and AGAIN for Décor, Tailgating, Lockers, Dorms, Birthdays and all Festive Occasions, DIY projects, Weddings, and more ...

Mix and Match for your next event!

### Brightz, Ltd.

8000 Yankee Road, Suite 225, Ottawa Lake, MI 49267  
Email: [info@brightz-ltd.com](mailto:info@brightz-ltd.com)

Visit us at [www.brightz-ltd.com](http://www.brightz-ltd.com) for more fun products!